



MTX-StarWater

Power-Up Guide

Index

Power-Up Guide 3

1. Plug In the Water Meter..... 3

2. Insert the microSIM Card in the Folding Tray..... 4

3. Plug In the Battery Connector 5


4. Start the Operation..... 6

5. Connect the Interface Cable 6

Sales Contact 7


Power-Up Guide

Following this guide you will learn how to connect your Starwater device to a pulse water meter.

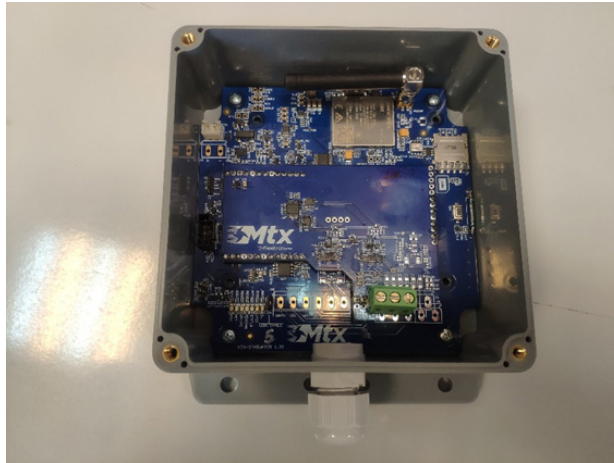


1. Plug In the Water Meter

- Loosen the cable gland and introduce the cable.

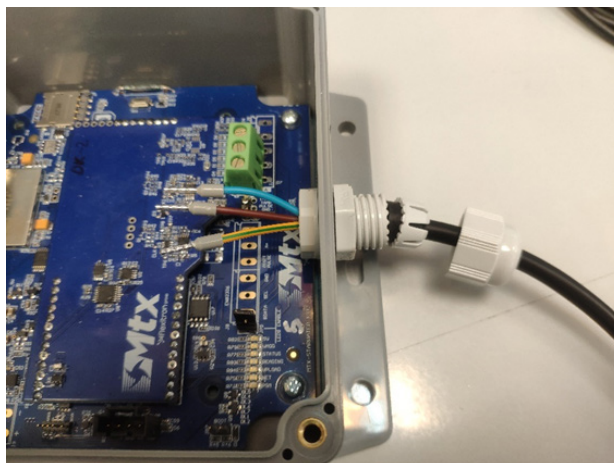

- It is highly recommended to use cable end caps for a proper connection.

- Connect the meter cables following the next pinout:

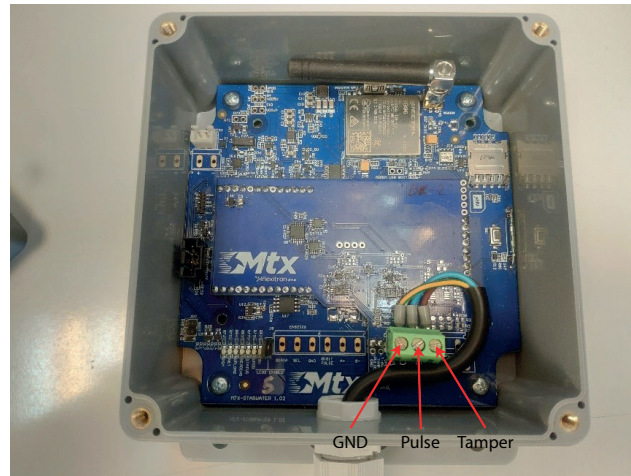

- Tighten the cable gland to prevent moisture from entering.

2. Insert the microSIM Card in the Folding Tray


- To unlock the tray, slide it towards push button near.



- Close and lock the tray sliding it.




3. Plug In the Battery Connector

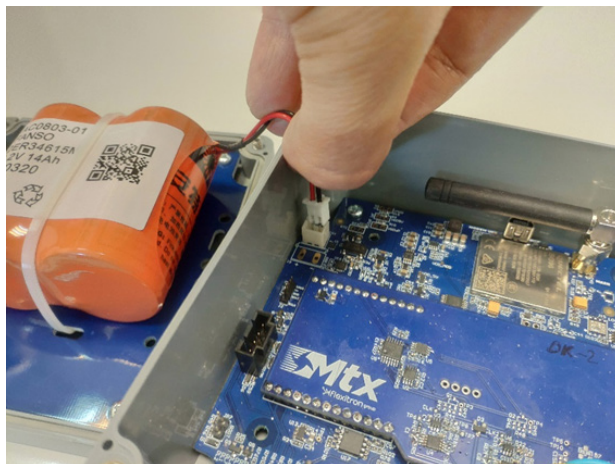


4. Start the Operation

- Push the reading button to initialize the system for the first time after connecting the battery.

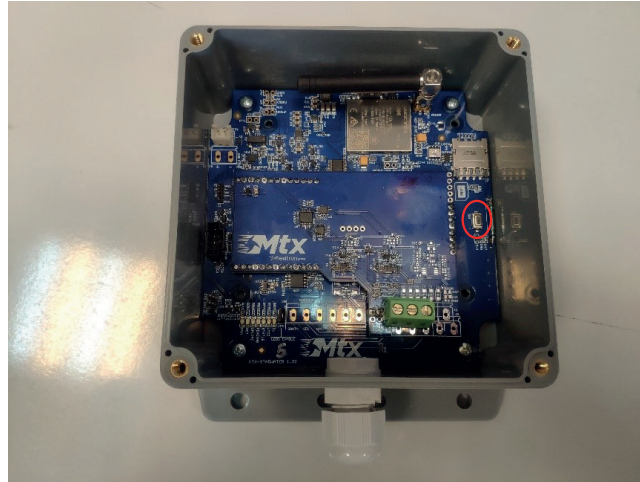

- This button forces an immediate reading of the internal register pulse counter and a connection to the cloud platform to upload data and check for pending commands. You can also use this function approaching a magnet from outside of the enclosure near to the same place. To avoid wasting battery, there is a maximum of 10 times a day for this functionality.

5. Connect the Interface Cable

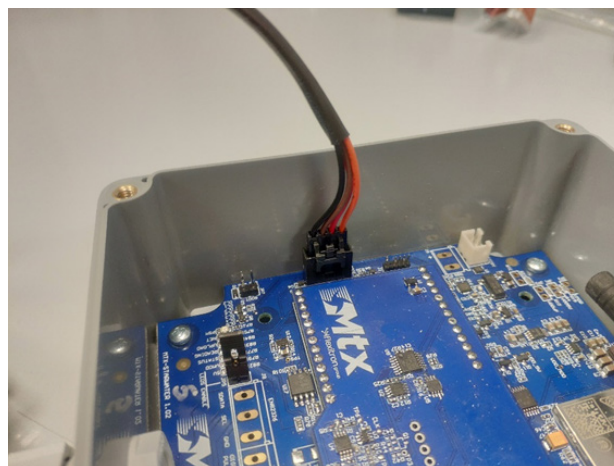

- This cable is used to apply some local configurations if required. For that, please contact our support team to get the latest version of the StarwaterApp Desktop Tool.

Sales Contact

SPAIN

C/ Alejandro Sánchez 109
28019 Madrid

Phone 1: 902.19.81.46
Phone 2: +34-91.560.27.37
Email: contact@webdyn.com

FRANCE

26 Rue des Gaudines
78100 Saint-Germain-en-Laye

Phone: +33.139042940
Email: contact@webdyn.com

INDIA

803-804 8th floor, Vishwadeep Building
District Centre, Janakpurt, 110058 New Delhi

Phone: +91.1141519011
Email: purchase-india@webdyn.com

PORTUGAL

LusoMatrix Lda.
Av. Coronel Eduardo Galhardo 7-1°C
1170-105 Lisbon, Portugal

Phone: +351.218162625
Email: comercial@lusomatrix.pt

APAC

9F, No. 156, Sec. 3, Minsheng E. Rd.
Songshan Dist., Taipei City 10596, Taiwan

Phone: +886.965333367
Email: ahsu@matrix.es

AUE

Dubai

Phone: +34.915602737
Email: hperchin@matrix.es

USA

Chicago

Phone: +34.915602737
Email: jcabezas@matrix.es